








Product group:	limit switch box neptun	Product type:	NEK...-ED	neptun <sup>↑</sup>	EN
Certifications:	    				



Table of Contents

1. Device Description ..... 2

2. Intended use ..... 2

3. Marking ..... 2

4. Safe activation..... 2

5. Assembly on actuators ..... 3

6. Assembly on manual valves ..... 3

7. Electrical Connection..... 3

8. Disassembly..... 4

9. Adjusting the swivel range..... 4

10. Connecting magnetic coils ..... 4

11. Outdoor use..... 4

12. Maintenance..... 4

13. Malfunctions ..... 4

14. Item number ..... 5

15. EU/UK Declaration of Conformity..... 5

Thank you for choosing a EUROTEC product. In doing so, you have chosen a quality product. To ensure functionality and your own safety, please read these operating instructions carefully before beginning with the installation. Nevertheless, should you have any further questions, please contact:

EUROTEC Antriebszubehör GmbH | Tel. +49 (0) 7543 93463 - 0 | Fax. - 10 | [sales@eurotec.global](mailto:sales@eurotec.global) | [www.eurotec.global](http://www.eurotec.global)

### 1. Device Description

Limit switch boxes serve to provide feedback and control the position of industrial valves, which are activated using pneumatic actuators. The shaft of the limit switch box has a positive connection with the shaft of the actuator and is rotated with the rotational movement of the actuator. The actuating cams attached to the shaft, activate the installed sensors, which support the electronic signal transmission. The neptun Ex de t limit switch boxes are, depending on the model, equipped with 1-3 mechanical Ex d limit switches.

### 2. Intended use

The neptun Ex de t limit switch boxes from EUROTEC Antriebszubehör GmbH are, suitable for use in hazardous areas of zone 1 und 2 with gas, mist or steam and of zone 21 and 22 with combustible dust. It's approved for use in the following ambient temperature ranges:

T6/T80°C: -55°C/-25°C...+40°C  
T5/T95°C: -55°C/-25°C...+60°C  
T4/T135°C: -55°C/-25°C...+75°C

The approved ambient temperature varies, depending on the sealing compound and the installed switch type. You can find the ambient temperature in the corresponding data sheet and on the product label. A lower temperature range down to -55°C applies to limit switch boxes, which are made of components, that are at least suitable for this temperature.

The electrical data depends on the according switch types and can be taken from the according datasheet or user manual of the switch.

A further shaft feed-through in the cover may additionally be provided, which is constructed structurally the same. This makes it possible to create an additional interface according to VDI/VDE 3845, which enables the assembly of further components on top of the cover (-WD).

### 3. Marking

The labeling on the housing is shown in the below table and varies depending on the installed switch type. You can find the number of the indicated responsible office for the QM system and the serial number below the CE mark. It consists of the year of manufacture and the respective order number.

Approval	Certificate	Marking
ATEX/IECEX	EPS 16 ATEX 1007 X IECEX EPS 16.0002 X	II 2G Ex de IIC T4-T6 Gb II 2D Ex tb IIIC T80°C-T135°C Db
EAC Ex	RU C-DE.HA65.B.00838/20	1 Ex de IIC <<T6...T4>> Gb X Ex t IIIC T80°C/T95°C/T130°C Db X
UKCA Ex	EPS 22 UKEX 1 144 X	II 2G Ex db eb IIC T4-T6 Gb II 2D Ex tb IIIC T80°C-T135°C Db



**The housings are not intended to be used as stepladders, to climb into the system. This can lead to damaging them and having a negative effect on their function. If the housing is damaged, water as well as dirt and combustible material can accumulate inside the housing. This can lead to a short circuit. Furthermore, the device can heat up severely due to the accumulation and can cause an explosion.**

### 4. Safe activation

To avoid mistakes, only specialists are permitted to set up, connect and put the devices into operation. The specialists must have expertise in the enhanced safety (Ex e) and dust ignition protection by enclosure (Ex t) types of protection as well as in all relevant regulations and provisions for operating materials in explosive areas. The limit switch boxes are developed in compliance with the following harmonised/designated standards:

EN IEC 60079-0:2018 (IEC 60079-0, Ed. 7.0)  
EN IEC 60079-7:2018/A1:2018 (IEC 60079:2015+AMD1:2017, Ed.5.1)  
EN 60079-31:2014 (IEC 60079-31, Ed. 2.0)  
EN 60079-1:2014/AC:2018-09 (IEC 60079-1/ISH1:2020,Ed.7.0)

It is imperative to observe the following safety instructions prior to initial operation:



**Failure to observe the safety instructions in these operating instructions and using or handling the device improperly, releases us from any liability. Furthermore, the warranty for the devices and accessory components will expire.**

- ☞ Check on the labeling, whether or not the existing device is suitable for your case of application.
- ☞ Observe national regulations and provisions as well as the corresponding installation specifications.
- ☞ Take suitable measures, to prevent unintentional activation or improper interferences with the device.
- ☞ Remove any existing sealing plugs just before inserting the wires to avoid Dirt in the housing.
- ☞ Make sure the strain is sufficiently relieved on the connecting cables or lay them securely.
- ☞ Check the approved conductor cross-sections as well as the approved tightening torques in the documentation for cable connections
- ☞ Effectively protect the devices and cables against damages.
- ☞ Avoid static charge on plastic parts and cables.
- ☞ Housing components made of metal must be included in the potential equalisation by means of appropriate assembly.
- ☞ This device may only be operated in a fully assembled condition.
- ☞ Never disconnect the connector cables while they have power.

### 5. Assembly on actuators

Using the enclosed mounting material, the modules can be quickly and easily assembled to the provided actuator according to VDI/VDE 3845 (Association of German Engineers/German Electrical Engineering Association).

1. Adjust your actuator to the final position, in which the groove of the drive shaft is parallel to the drive housing.
2. Now, place the box with the appropriate mounting bracket on the actuator.
3. The mounting bracket can now be screwed tightly onto the actuator using the provided lock screws (4 pcs.).
4. Unscrew the four cover screws and open the housing. Make sure you do not unscrew the screws too far; they should remain in the cover.
5. Insert the system cable into the housing through the cable gland and connect the individual wires to the terminal block. When doing so, please refer to the terminal diagram on the respective data sheet or on the cover of the housing and connect the housing to the equipotential bonding.
6. Close the housing using the cover. When attaching the cover, please make sure that the seal is correctly positioned and tighten the cover screws.

### 6. Assembly on manual valves

The limit switch boxes with F05 interface at the bottom side of the housing can also be mounted on manual valves by using our mounting kit "MSH". Thereto your manual valve needs a top flange according to ISO 5211 (F03 - F16) and a threaded bore hole in the valve shaft. For detailed assembly instructions please consider the operation manual of the "MSH".

### 7. Electrical Connection

You can find the approved cable diameter in the corresponding data sheet for the limit switch box. You can find the terminal diagram for the wiring either on or in the cover of the housing as well as on the corresponding data sheet for the limit switch box.



**When tightening the cable gland, please make sure that the base body of the cable gland, which is screwed in place in the housing, does not rotate as well. This could make the sealing washer shift and it would then no longer provide proper sealing. It is best to use 2 open-ended spanners for this purpose. One to secure the base body of the cable gland and one to tighten the screw nut.**

Standard terminals:

Terminal	Producer	Certificate	Wire cross-section	Multi-wire	Tightening torque	Stripping length	colour
09-9702...	Bartec	PTB 99 ATEX 3117U	0,5 - 2,5 mm <sup>2</sup>	2x 1,0 mm <sup>2</sup>	0,4 Nm	6-8 mm	light grey
1704342	Phoenix	KEMA 00 ATEX 2053U	0,5 - 2,5 mm <sup>2</sup>	2x 0,75 mm <sup>2</sup>	0,4 - 0,5 Nm	9 mm	green
1705547	Phoenix	KEMA 00 ATEX 2053U	0,5 - 2,5 mm <sup>2</sup>	2x 0,75 mm <sup>2</sup>	0,4 - 0,5 Nm	9 mm	green
2703208...	Phoenix	PTB 06 ATEX 1034U	0,5 - 4,0 mm <sup>2</sup>	2x1,50 mm <sup>2</sup>	0,6 - 0,8 Nm	8 mm	grey

If you have installed another Ex e terminal in the housing, then please find the connection data in the corresponding data sheet and the corresponding type examination certificate for the terminal. (Minimum wire cross-section: 0,5 mm<sup>2</sup> / max. current: 6A)

Standard cable glands:

Gland type	Producer	Certificate	Size	Cable diameter	Material	Colour
GHG...	CEAG	PTB 99 ATEX 3101 X	M16x1,5	5,5 - 10 mm	PA6	black
GHG...	CEAG	PTB 99 ATEX 3128 X	M20x1,5	5,5 - 13 mm	PA6	black
GHG...	CEAG	PTB 99 ATEX 3128 X	M25x1,5	8,0 - 17 mm	PA6	black

If you have installed another Ex e terminal in the housing, then please find the connection data in the corresponding data sheet and the corresponding type examination certificate for the cable gland.

### 8. Disassembly

During dismantling you must observe the instructions in Chapter 4.

1. Disconnect the device from the power supply.
2. Open the cover of the housing by unscrewing the 4 cover screws. Make sure that you do not unscrew the screws too far; they should remain in the cover and not be able to fall out.
3. Disconnect the cables in the system from the terminal strip in the limit switch box.
4. Now, unscrew the 4 screws with which the bracket of the box is attached to the actuator and remove the limit switch box from the actuator.

### 9. Adjusting the swivel range

Die Betätiger sind von der EUROTEC Antriebszubehör GmbH immer auf einen Schwenkbereich von 0-90° voreingestellt. Falls Sie für Ihre Anwendung einen anderen Schwenkbereich benötigen, so führen Sie bitte die folgenden Arbeitsschritte durch:

1. Bring the actuator in the desired end position 1. Adjust the lower cam first. Press the cam down and turn it into the position in which it actuates the switch. Now let the cam engage again with the gearing. (Fig. 2)
2. Bring the actuator in the desired end position 2. Press the upper cam down and turn it into the position in which it actuates the switch. Now let the cam engage again with the gearing.
3. Finally verify your presetting through repeated switching of the actuator.

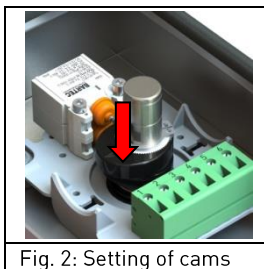


Fig. 2: Setting of cams

### 10. Connecting magnetic coils

Depending on the model, the neptun Ex de t limit switch boxes from EUROTEC provide the possibility to connect one solenoid coil inside the housing of the types of protection Ex m, Ex dm oder Ex d. The suitable switch boxes are marked with an additional '-2KV' in their part number. This version has a 9-pole terminal block inside and a second cable gland M20x1,5 at the housing. The maximum voltage for this version is 24V DC, as the terminal block does not have any pitch spacers (see KEMA 00 ATEX 2053 U). For the solenoid connection applies a minimum wire cross-section of 0,5mm<sup>2</sup> and a maximum current of 6A.

### 11. Outdoor use

If you would like to use the limit switch boxes outdoors (outdoor installation), the limit switch boxes should be equipped with an Ex e pressure compensating element. The pressure compensating element prevents water condensation in the housing in the event of outdoor temperature fluctuations. Please check whether or not there is a pressure compensating element. If not, you have to order respective limit switch boxes. In this case, the addition to the item number is "-DAE".

### 12. Maintenance

The limit switch boxes for ATEX areas may never be opened during operation or in an existing explosive atmosphere. Opening them can cause an explosion. Therefore, maintenance work is only possible outside of the Ex area. The cover screws can loosen in the event of strong vibrations or temperature fluctuations. Retighten the screws every two years. Any other modifications to the device are prohibited!

### 13. Malfunctions

In the event of malfunctions, please check the lines, line connectors and the position of the cams. Furthermore, please check whether condensation has accumulated in the housing and whether the valve and the actuator are functioning properly. Rectify any possible errors. If this does not rectify the malfunction, disconnect the housing from the power supply voltage and contact one of the manufacturer's authorised and trained specialists.

#### 14. Item number

Please refer to the related order code of the switch box series neptun NEK.

#### 15. EU/UK Declaration of Conformity

##### EU/UK-Declaration of Conformity according to the Directive 2014/34/EU and SI 2016 No. 1107


We herewith confirm that the following named equipment for the use in hazardous areas does fulfill the requirements of the Directive 2014/34/EU and SI 2016 No. 1107 in the delivered execution:

NEK...ED...                      neptun limit switch box. Housing stainless steel

The equipment has been developed and designed in consideration of the following harmonised/designated standards:

EN IEC 60079-0:2018 IEC 60079-0, Ed. 7.0	Explosive atmospheres - Part 0: Equipment - General requirements
EN IEC 60079-7:2018/A1:2018 IEC 60079-7:2015+AMD1:2017,, Ed. 5.1	Explosive atmospheres - Part 7: Equipment protection by increased safety "e"
EN 60079-1:2014/AC:2018-0 IEC 60079-1/ISH:2020, Ed. 7.0	Explosive atmospheres - Part 1: Equipment protection by flameproof enclosures „d“
EN 60079-31:2014 IEC 60079-31, Ed. 2.0	Explosive atmospheres - Part 31: Equipment dust ignition protection by enclosure "t"

#### Marking:



#### EU/UK-Type Examination Certificate:

**EPS 16 ATEX 1 007 X / EPS 22 UKEX 1 144 X**  
Bureau Veritas Consumer Products Services Germany GmbH  
Businesspark A96, DE-86842 Türkheim  
Ident.-No.: 2004 / 8507

#### EU/UK-Certificate Quality Assurance:

**EPS 22 ATEX Q 098 / EPS 22 UKEX Q 098**  
Bureau Veritas Consumer Products Services Germany GmbH  
Businesspark A96, DE-86842 Türkheim  
Ident.-No.: 2004 / 8507

2022/06/07

Date

  
General Manager: Melissa Berge